

## Toyota Crown Spares for Sale

SN	Description	M. PN	MFG	Quantity	EUn
1	BULB:12V,10W,BA15S,LICENCE PLATE,LXS12	17311	NARVA	175.000	EA
2	PAINT:2K TAXI TOYOTA (BEIGE)	2K P422 BASECOAT PM AO020	NEXA	95.000	L
3	PILLAR:FRT RH UPPER	61021-43010	TOYOTA	1.000	EA
4	FENDER:FRONT RH, FOR TOYOTA CROWN LXS12	53811-43021	TOYOTA	4.000	EA
5	REINFORCEMENT:BUMPER FRT, TOYOTA LXS12	52021-43020	TOYOTA	5.000	EA
6	DOOR ASSY:FRONT RH,T CROWN LXS12/LXS12R	67001-43023	TOYOTA	2.000	EA
7	MOULDING:RH ROOF	75551-43010	TOYOTA	1.000	EA
8	SENSOR:2-PULSE, TOYOTA LXS12 TAXI	JB TYPE	X	93.000	EA
9	BUSH:FOR STABILIZER BAR, TOYOTA LXS12	56112-V0100	NISSAN	235.000	EA
10	BOLT:FOR STABILIZER BAR, TOYOTA LXS12	01111-00761	NISSAN	8.000	EA
11	BEARING,BALL:DEEP GROOVE,17MM BORE	6203 ZZE	NACHI	71.000	EA
12	PULLEY, IDLER:	PY6203	X	40.000	EA
13	BOLT:FOR IDLER PULLEY	ACBRBOLT-6203	MEGAPOWER	52.000	EA
14	FILTER,AIR:FOR TOYOTA CROWN LXS12	SA167	SHINKO	380.000	EA
15	FILTER,FUEL:FOR TOYOTA CROWN LXS12	23303-64010	SHINKO	302.000	EA
16	BELT,V:FOR FAN OF ALTERNATOR	SP-RAF 3400	BANDO	287.000	EA
17	BELT,FAN:STEERING PUMP, FOR TOYOTA LXS12	SP-RAF 3320	BANDO	124.000	EA
18	BLADE - FAN	16361-54060	TOYOTA	7.000	EA
19	BEARING,MAIN:FOR TOYOTA CROWN LXS12	11701-54081-02	TOYOTA	140.000	EA
20	BELT,TIMING:FOR TOYOTA CROWN LS130 TAXI	TP CT723	CONTITEC	466.000	EA
21	IDLER SUB ASSY #1:TIMING	62TB0813B01A	NSK	321.000	EA
22	IDLER SUB ASSY #2:TIMING	PU128424RR9DW	KOYO	41.000	EA
23	HOSE (DISCHARGE) - AIR CON	SC-745-90SV	X	2.000	EA
24	COVER - TIMING BELT	11321-54020	TOYOTA	8.000	EA
25	FLYWHEEL	13405-54060	TOYOTA	1.000	EA
26	STRAINER - OIL	#N/A	#N/A	1.000	EA
27	VALVE - VACUUM	90910-12058	TOYOTA	3.000	EA
28	GASKET - END PLATE FRT	11312-54021	TOYOTA	3.000	EA
29	GASKET - OIL STRAINER	15149-54012	TOYOTA	4.000	EA
30	GASKET - REAR COVER	11383-54030	TOYOTA	6.000	EA
31	COCK (DRAIN) - RADIATOR	23322-54010	TOYOTA	4.000	EA
32	CAP - RADIATOR	16401-72090	TOYOTA	14.000	EA
33	PIPE - FUEL RETURN	23760-54030	TOYOTA	6.000	EA
34	COUPLING:FOR WATER PUMP	16210-54130	TOYOTA	11.000	SET
35	GASKET - TIMING COVER	11328-54021	TOYOTA	21.000	EA
36	CAP - OIL	12180-70020	TOYOTA	25.000	EA
37	BEARING (STD) - CAMSHAFT	11802-54020	TOYOTA	28.000	EA
38	RETAINER - VALVE SPRING	13741-54020	TOYOTA	24.000	EA
39	VALVE - OIL PUMP RELIEF	15131-54010	TOYOTA	8.000	EA
40	WASHER (THRUST) - CRANKSHAFT	11011-54020	TOYOTA	57.000	EA
41	PIPE - FUEL OVERFLOW RETURN	23764-54080	TOYOTA	2.000	EA
42	GEAR - CRANKSHAFT	13521-54030	TOYOTA	26.000	EA
43	WASHER - TIMING GEAR	13566-54040	TOYOTA	17.000	EA
44	BOLT - CRANKSHAFT PULLEY	90901-19028	TOYOTA	10.000	EA
45	LOCK - RETAINER	90913-03014	TOYOTA	64.000	EA
46	KEY - CYLINDER HEAD	11183-54020	TOYOTA	10.000	SET
47	KEY - CRANKSHAFT	95161-30622	TOYOTA	2.000	EA

48	BEARING 0.50MM - CON ROD	13205-54024	TOYOTA	2.000	SET
49	PULLEY,WATER PUMP:FOR TOYOTA LXS12	16371-54030	TOYOTA	21.000	EA
50	SPRING - VALVE	90504-49001	TOYOTA	32.000	EA
51	BEARING 0.25 - MAIN	11704-54061	TOYOTA	4.000	SET
52	PLATE - TIMING COVER INNER	15115-54022	TOYOTA	13.000	SET
53	OIL SILICON - CLUTCH - FAN	08816-05000	TOYOTA	849.000	EA
54	PULLEY - VANE PUMP	44311-30150	TOYOTA	5.000	SET
55	BEARING,CLUTCH SHAFT:	90364-38034	TOYOTA	1.000	EA
56	BEARING,BALL:DEEP GROOVE C/W SNAP RING,3	6307 NR	NACHI	22.000	EA
57	BEARING,CLUTCH SHAFT INNER:	90364-19006	TOYOTA	9.000	EA
58	BEARING,1ST & 2ND GEAR:	90364-43006	TOYOTA	45.000	EA
59	BALL:D=6.35MM	90360-06004	TOYOTA	12.000	EA
60	BALL:D=7.94MM	90360-08009	TOYOTA	9.000	EA
61	BUSH:FOR 1ST GEAR	33345-30020	TOYOTA	1.000	EA
62	CLIP:FOR DRIVE GEAR	90467-25001	TOYOTA	2.000	EA
63	PIN:FOR SHIFT INTERLOCK '1'	33264-22010	TOYOTA	9.000	EA
64	PIN:SHIFT INTERLOCK '2'	33265-22010	TOYOTA	5.000	EA
65	PIN:FOR SHIFT INTERLOCK '2'	33266-22010	TOYOTA	9.000	EA
66	PIN:FOR SHIFT FORK	90254-05016	TOYOTA	10.000	EA
67	CLIP:FOR REVERSE SHIFT ARM	96160-00800	TOYOTA	2.000	EA
68	SPRING '2':FOR FORK SHAFT	90501-14123	TOYOTA	10.000	EA
69	SEAL,SHAFT:OIL (FRT),30MM X 45MM X 8MM	90311-30014	TOYOTA	6.000	EA
70	SEAL,SHAFT:REAR,38MM X 58MM X 11MM	90311-38032	TOYOTA	14.000	EA
71	FORK #1:FOR GEAR SHIFT	33212-30050	TOYOTA	4.000	EA
72	FORK #2:FOR GEAR SHIFT	33213-30060	TOYOTA	16.000	EA
73	BOLT:FOR FORK	90105-06143	TOYOTA	5.000	EA
74	BUSH:FOR GEAR LEVER,TOYOTA LXS12 TAXI	33505-22010	TOYOTA	102.000	EA
75	GEAR (PINION):FOR SPEEDOMETER	33404-22010	TOYOTA	9.000	EA
76	YOKE - SUB ASSY	37302-35030	TOYOTA	3.000	EA
77	CABLE - ACCELERATOR	21960-54030	TOYOTA	45.000	EA
78	CAP,FUEL TANK:FOR TOYOTA CROWN LXS12	77310-12150	TOYOTA	10.000	EA
79	GASKET,EXHAUST PIPE:	90917-06042	TOYOTA	5.000	EA
80	GASKET - EXHAUST PIPE	90917-06039	TOYOTA	1.000	EA
81	NUT - WHEEL	90942-01021	TOYOTA	81.000	EA
82	RETAINER #1 - FRT STABILIZER	90948-02032	TOYOTA	30.000	EA
83	RETAINER #2 - FRT STABILIZER	90948-02015	TOYOTA	34.000	EA
84	BOLT - REAR HUB	90942-02047	TOYOTA	81.000	EA
85	BEARING,REAR WHEEL:35MM BORE	35 BCD 08 S6CS	NACHI	190.000	EA
86	SEAL,SHAFT:REAR WHEEL,52MM X 65MM X 9MM	90311-52059	TOYOTA	39.000	EA
87	CONE:HUB SHAFT,FOR TOYOTA LXS12 TAXI	C014	KOYO	177.000	EA
88	BEARING,ROLLER:TAPER,30MM BORE	57007	KOYO	19.000	EA
89	SPACER - DRIVE PINION	41231-22010	TOYOTA	3.000	EA
90	BEARING,DRIVE PINION:35MM BORE	TR-0708-1.R	KOYO	16.000	EA
91	WASHER T=1.2 - DIFFERENTIAL	41351-30060	TOYOTA	16.000	EA
92	WASHER - DIFFERENTIAL	41361-30060	TOYOTA	6.000	EA
93	GEAR - DIFF - SIDE	41331-30030	TOYOTA	2.000	EA
94	SENSOR - SPEEDOMETER	83181-20040	TOYOTA	1.000	EA
95	PIN - SPEEDOMETER	83783-22010	TOYOTA	22.000	EA
96	GAUGE ASSY - WATER TEMP	83420-16040	TOYOTA	3.000	EA
97	SENSOR - WATER TEMP	89422-20010	TOYOTA	5.000	EA

98	SEAL,OIL:FOR ALTERNATOR,TOYOTA LXS12	AZ0744E	NOK	155.000	EA
99	BEARING:17MM BORE,FOR ALTERNATOR	345	KOYO	3.000	EA
100	PLATE - ALTERNATOR	27312-64130	TOYOTA	3.000	EA
101	HOLDER W RECTIFIER	27357-63020	TOYOTA	2.000	EA
102	CARBON BRUSH - ALTERNATOR	27371-70300	TOYOTA	60.000	EA
103	PULLEY - ALTERNATOR	29366-54080	TOYOTA	10.000	EA
104	RETAINER - STARTER IDLER GEAR	28229-26040	TOYOTA	1.000	EA
105	ROLLER - STARTER CLUTCH	28228-26040	TOYOTA	1.000	EA
106	O-RING:VACUUM PUMP,FOR TOYOTA CROWN	29342-64030	TOYOTA	2.000	EA
107	SEAL,OIL:FOR ALTERNATOR,TOYOTA CROWN	AE 0995J	NOK	12.000	EA
108	SHAFT - VACUUM PUMP	29336-64031	TOYOTA	1.000	EA
109	PUMP,VACUUM:FOR TOYOTA CROWN LS130 ENGINE	29300-54130	TOYOTA	2.000	EA
110	CAP - CLUTCH MASTER CYLINDER	47230-20040	TOYOTA	2.000	EA
111	GROMMET - MASTER CYLINDER	47255-16010	TOYOTA	8.000	SET
112	PAD - BRAKE/CLUTCH PEDAL	31321-14020	TOYOTA	89.000	EA
113	MIRROR (SUB ASSY) RH	87931-30490	TOYOTA	3.000	EA
114	MIRROR (SUB ASSY) LH	87961-30440	TOYOTA	1.000	EA
115	EMBLEM - TRUNK LID	75431-30200	TOYOTA	5.000	EA
116	RUBBER:FOR WIPER TANK MOTOR	90099-32089	TOYOTA	11.000	EA
117	HINGE - DOOR REAR LH	69410-87001	TOYOTA	3.000	EA
118	WASHER:LOWER ARM,FOR TOYOTA LXS12	56113-60U0A	NISSAN	72.000	EA
119	WINDSCREEN,FRONT:FOR TOYOTA CROWN LXS12	56111-43010	TOYOTA	16.000	EA
120	BELT,V:FOR FAN OF AIR CON	SP-RAF 3470	BANDO	51.000	EA
121	HOSE #3 - AIR CLEANER	17883-54111	TOYOTA	4.000	EA
122	SHROUD - UPPER	16711-54570	TOYOTA	14.000	EA
123	EVAPORATOR:FOR TOYOTA CROWN LXS 12	CLHOAC05CA1	MEGAPOWER	5.000	EA
124	MOTOR,BLOWER:FOR TOYOTA CROWN LXS12	2030004-4	UTS AUTO	4.000	EA
125	HOSE,SUCTION:56" LG,FOR TOYOTA CROWN LXS	HSTOCRLXS10	MEGAPOWER	2.000	EA
126	HOSE,DISCHARGE:48" LG,C/W END FITTINGS	#N/A	#N/A	26.000	EA
127	PIPE - OUTLET	WG21216R-516	WUI HONG	12.000	EA
128	PIPE - OUTLET	WG24246R-518	WUI HONG	4.000	EA
129	DRYER,AIRCON:FOR TOYOTA CROWN	RDMILA 03A-Y4	YUKI	5.000	EA
130	HOSE - TOP	16571-54460	TOYOTA	17.000	EA
131	HOSE - LOWER	16572-54510	TOYOTA	20.000	EA
132	COOLING COIL - SANDEN	51130-H0150	SANDEN	4.000	EA
133	VALVE,EXPANSION:FOR TOYOTA CROWN	51515-A0130	WUI HONG	23.000	EA
134	VALVE - OIL JET	15605-54010	TOYOTA	20.000	EA
135	HOSE - AIR CLEANER	17882-54261	TOYOTA	1.000	EA
136	PIPE - RECEIVER DRYER	WG01-A0870	WUI HONG	6.000	EA
137	RUBBER SEAL - WIPER TANK	85336-30160	TOYOTA	6.000	EA
138	HOSE - STEERING	44348-43010	TOYOTA	11.000	EA
139	SHAFT - STRG RACK	45503-29305	TOYOTA	1.000	EA
140	HOSE - STEERING	44410-43010	TOYOTA	5.000	EA
141	GASKET KIT:FOR RACK & PINION	04445-43010	TOYOTA	4.000	EA
142	GASKET KIT:FOR CONTROL VALVE	04455-43010	TOYOTA	3.000	SET
143	SEAT - RACK GUIDE	44277-22010	TOYOTA	3.000	SET
144	BOOT - RACK DUST COVER	45535-22080	TOYOTA	5.000	EA
145	TIE ROD END:BOTH SIDE,FOR STRG	45046-29206	KTC	2.000	EA
146	BRACKET NO2 - STRG GEAR & LINK	45515-22100	TOYOTA	4.000	EA
147	COVER - STRG GEAR DUST	45222-32010	TOYOTA	8.000	EA

148	BEARING:FOR REAR COUNTER	90363-22007	TOYOTA	4.000	EA
149	BEARING,ROLLER:	33350-30010	TOYOTA	26.000	EA
150	GEAR,REVERSE:	33331-30061	TOYOTA	2.000	EA
151	GEAR: 1ST	33032-30030	TOYOTA	8.000	EA
152	GEAR: 3RD	33034-30011	TOYOTA	1.000	EA
153	SYNCHRONIZER RING: NO.1	33367-30060	TOYOTA	49.000	EA
154	SYNCHRONIZER RING SET: NO.1	33037-30011	TOYOTA	3.000	EA
155	SYNCHRONIZER RING SET: NO.2	33038-30011	TOYOTA	9.000	EA
156	SYNCHRONIZER RING: NO.2	33368-30120	TOYOTA	2.000	EA
157	SLEEVE:FOR T/M HUB NO.1	33363-30031	TOYOTA	15.000	EA
158	SLEEVE:FOR T/M HUB NO.2	33364-30031	TOYOTA	15.000	EA
159	HUB:FOR T/M CLUTCH NO.1	33361-30030	TOYOTA	4.000	EA
160	SYNCHRONIZER RING : OUTER NO.3	33384-30010	TOYOTA	2.000	EA
161	SYNCHRONIZER RING: REVERSE	33387-30011	TOYOTA	3.000	EA
162	SPRING,COMPRESSION: T/M	90501-07104	TOYOTA	5.000	EA
163	LEVER ASSY:FOR FLOOR SHIFT	33530-43010	TOYOTA	3.000	SET
164	BEARING ASSY:FOR TOYOTA CROWN LXS12	37230-43010	TOYOTA	82.000	SET
165	MOUNTING - ENGINE REAR	12361-54181	TOYOTA	381.000	EA
166	MOUNTING - GEAR BOX	12371-34030	TOYOTA	23.000	EA
167	BRACKET - FRT TENSION	57107-43020	TOYOTA	3.000	EA
168	ROD ASSY:ACCELERATOR PEDAL,TOYOTA LXS10	78120-43040	TOYOTA	2.000	EA
169	GASKET - FRT EXHAUST PIPE	90917-06042	TOYOTA	1.000	EA
170	GASKET - EXHAUST PIPE CENTER	90917-06039	TOYOTA	6.000	EA
171	PIPE ASSY - REAR EXHAUST	17430-5B880	TOYOTA	4.000	EA
172	CABLE ASSY,ACCELERATOR:	78180-43040	TOYOTA	14.000	EA
173	COVER - DUST	48559-22010	TOYOTA	16.000	EA
174	MOUNTING	48609-22120	TOYOTA	14.000	EA
175	BEARING,DOUBLE BALL:FRT WHEEL INNER/OUT	32BVV07-7G	NACHI	5.000	EA
176	SEAL,SHAFT:FRT WHEEL,47MM X 73MM X 7MM	90311-48013	TOYOTA	10.000	SET
177	CUSHION - STABILIZER FRT	48817-22020	TOYOTA	46.000	EA
178	GASKET - REAR AXLE	42425-30031	TOYOTA	9.000	EA
179	GASKET - REAR AXLE	42185-30061	TOYOTA	11.000	EA
180	RETAINER - REAR AXLE	42424-30040	TOYOTA	13.000	EA
181	ARM - UPPER RH & LH	48710-43010	TOYOTA	15.000	EA
182	OIL SEAL - DIFFERENTIAL	90311-38047	TOYOTA	4.000	EA
183	BUSH - UPPER & LOWER ARM	48702-43010	TOYOTA	3.000	EA
184	LAMP ASSY:COMB REAR,LH,FOR TOYOTA LXS10	81560-43010	TOYOTA	37.000	EA
185	LAMP ASSY:COMB REAR,RH,FOR TOYOTA LXS10	81550-43010	TOYOTA	52.000	EA
186	LAMP ASSY:FRT RH SIGNAL,FOR TOYOTA LXS10	81510-43010	TOYOTA	48.000	EA
187	LAMP ASSY:FRT LH SIGNAL,FOR TOYOTA LXS10	81520-43010	TOYOTA	36.000	EA
188	HEADLAMP:RH,FOR TOYOTA CROWN LXS10	81110-43010	TOYOTA	61.000	EA
189	HEADLAMP:LH,FOR TOYOTA CROWN LXS10	81150-43010	TOYOTA	55.000	EA
190	THERMISTOR - AIR CON	51532-40250	WUI HONG	104.000	EA
191	THERMOSTAT - AIR CON	VA541-10021	SANDEN	3.000	EA
192	RELAY - AIR CON THERMOSTAT	10940 T2	OEM	6.000	EA
193	RELAY - AIR CON	90987-04002	TOYOTA	4.000	EA
194	SWITCH - IGNITION	84450-16080	TOYOTA	1.000	EA
195	FLASHER UNIT	81980-43010	TOYOTA	2.000	EA
196	PROTECTOR,DUST STARTER:FOR TOYOTA CROWN	28199-74110	TOYOTA	7.000	EA
197	REPAIR KIT:FOR STARTER TERMINAL	28226-72010	TOYOTA	2.000	SET

198	PLUNGER - STARTER	28235-54380	TOYOTA	4.000	EA
199	CLUTCH - SUB - STARTER	28011-54380	TOYOTA	4.000	EA
200	ARMATURE	28160-54380	TOYOTA	4.000	EA
201	BEARING:FOR ARMATURE - NO.1,8MM BORE	638 RD-1	KOYO	4.000	EA
202	BEARING:FOR ARMATURE - NO.2,15MM BORE	600 2DW	NSK	4.000	EA
203	CLUTCH - SUB - STARTER	28011-54380	TOYOTA	1.000	EA
204	HOUSING ASSY	28110-54380	TOYOTA	2.000	EA
205	GEAR - STARTER	28254-64130	TOYOTA	1.000	EA
206	SPRING	28165-76070	TOYOTA	2.000	EA
207	HOLDER ASSY	28140-54380	TOYOTA	2.000	EA
208	MOTOR,STARTER:12V,2.0 KW,FOR TOYOTA LXS	228000-2120	HEL	21.000	EA
209	SWITCH ASSY - MAGNET	28150-54380	TOYOTA	3.000	EA
210	PAD,BRAKE DISC:FRONT,TOYOTA LXS & LXS12R	MRDB1141T	MERGENT	121.000	SET
211	CAP - BRAKE RESERVOIR	47230-12040	TOYOTA	2.000	EA
212	DISC - FRT BRAKE	43512-22120	TOYOTA	42.000	EA
213	FITTING KIT - FRT	04947-43010	TOYOTA	6.000	EA
214	SHIM KIT - FRT	04945-43010	TOYOTA	51.000	EA
215	HOSE - BRAKE (FRT)	90947-02570	TOYOTA	6.000	EA
216	HOSE - BRAKE (REAR)	90947-02619	TOYOTA	4.000	EA
217	PROTECTOR - FRT RH FENDER	53875-43010	TOYOTA	2.000	EA
218	MOULDING - FRT W/SCREEN	75533-43010	TOYOTA	20.000	EA
219	MOULDING - FRT RH DOOR	75710-30440	TOYOTA	2.000	EA
220	BRACE - FRT LH FENDER	53835-43010	TOYOTA	1.000	EA
221	BRACE - FRT RH FENDER	53836-43010	TOYOTA	2.000	EA
222	HANDLE SUB-ASSY (IN) -F/R DOOR	69205-30120-B1	TOYOTA	3.000	EA
223	MIRROR ASSY - F/L DOOR	87940-43010 CO	TOYOTA	4.000	EA
224	STOPPER,FRT DOOR:FOR TOYOTA CROWN TAXI	68610-43020	TOYOTA	3.000	EA
225	LOCK ASSY - DOOR F/R	69030-43010	TOYOTA	1.000	EA
226	LOCK ASSY - DOOR F/L	69040-43010	TOYOTA	1.000	EA
227	LOCK ASSY - DOOR R/R	69050-43010	TOYOTA	2.000	EA
228	LOCK ASSY:DOOR R/L,FOR TOYOTA TAXI	69060-43040	TOYOTA	1.000	EA
229	HINGE ASSY - DOOR R/L UPPER	68760-32060	TOYOTA	4.000	EA
230	HINGE ASSY - DOOR R/L LOWER	68780-32060	TOYOTA	2.000	EA
231	PLUG,HEATER:FOR TOYOTA CROWN LXS	PT-155	JKT	162.000	EA
232	FILTER,OIL:FOR TOYOTA CROWN LXS12	O-1640	OSAKA	589.000	EA
233	RADIATOR:FOR TOYOTA CROWN LXS12 TAXI	2461-1009(B)	SHINKO	26.000	EA
234	GASKET,MARK D:CYLINDER HEAD,TOYOTA LXS12	11115-54130-DO	TOYOTA	22.000	EA
235	PISTON:STD,FOR TOYOTA CROWN LX12 TAXI	13101-54120	IZUMI	46.000	EA
236	PISTON:0.50,FOR TOYOTA CROWN LXS12	13103-54120	IZUMI	103.000	EA
237	PISTON RING STD:FOR TOYOTA LXS 12 TAXI	SDT10167ZZ (STD)	NPR	15.000	SET
238	PISTON RING:0.50,FOR TOYOTA CROWN LXS12	SDT10167ZZ (0.50)	NPR	16.000	SET
239	CON-ROD ASSY	13201-59106	TOYOTA	92.000	EA
240	BEARING STD:(MARK 2),CON-ROD	13041-54042-02	TOYOTA	156.000	SET
241	GASKET KIT:OVERHAUL	04111-54230	TOYOTA	23.000	SET
242	ENGINE ASSY	19000-5B550	TOYOTA	3.000	EA
243	AMPLIFIER ASSY - AIR CON	88650-43020	TOYOTA	2.000	EA
244	BEARING - STEERING COLUMN	90363-18005	TOYOTA	5.000	EA
245	SHOCK ABSORBER - FRT	48510-49037	TOYOTA	5.000	EA
246	ABSORBER,SHOCK:REAR	U3423	TOKICO	48.000	EA
247	COVER,CLUTCH:FOR TOYOTA LX12 TAXI	31210-35102	TOYOTA	5.000	EA

248	BEARING:FOR CLUTCH,FOR TOYOTA LXS12	50 SCRN 40.P8P	NACHI	189.000	EA
249	PUMP,CLUTCH MASTER:FOR TOYOTA LXS 12	31410-43020	HASAKI	17.000	EA
250	REPAIR KIT:FOR CLUTCH MASTER	04311-12110	TOYOTA	36.000	EA
251	BOOT - CLUTCH RELEASE FORK	31126-14010	TOYOTA	18.000	SET
252	FORK:CLUTCH RELEASE	31204-43010	TOYOTA	3.000	EA
253	BALL JOINT - RELEASE FORK	31236-14010	TOYOTA	56.000	EA
254	SHOE,BRAKE:REAR (TO YR2001),TOYOTA LXS12	04495-43060	TOYOTA	7.000	EA
255	REPAIR KIT:FOR FRT CALIPER	04479-35031	TOYOTA	4.000	EA
256	SHOE,BRAKE:REAR (FR YR2001),TOYOTA LXS12	D2364B	MERGENT	93.000	EA
257	ENGINE BLOCK:FOR TOYOTA CROWN LXS12	11401-59818	TOYOTA	4.000	EA
258	ENERGY ABSORBER - BUMPER REAR	52614-43010	TOYOTA	4.000	EA
259	KEY SET - DOOR LOCK F/L	69052-43010	TOYOTA	2.000	EA
260	PUMP,FUEL:FOR TOYOTA CROWN LXS12	22100-5B810	TOYOTA	9.000	EA
261	CYLINDER HEAD:	11101-54150	TOYOTA	1.000	EA
262	CYLINDER HEAD:	11101-54150	TOYOTA	5.000	EA
263	VALVE - EXHAUST	13715-54050	TOYOTA	152.000	EA
264	VALVE - INTAKE	13711-54030	TOYOTA	156.000	EA
265	INJECTOR,FUEL:FOR TOYOTA CROWN LXS12	23600-59266	TOYOTA	20.000	EA
266	DIFFERENTIAL UNIT:FOR TOYOTA LXS12 TAXI	41110-43030	TOYOTA	3.000	EA
267	NUT:FOR DIFFERENTIAL UNIT,TOYOTA LXS12	90179-18020	TOYOTA	28.000	EA
268	FLANGE:FOR DIFFERENTIAL UNIT,LXS12	41204-35050	TOYOTA	9.000	EA
269	SHAFT:FOR DIFFERENTIAL UNIT,TOYOTA LXS12	41342-22021	TOYOTA	3.000	EA
270	PIN:FOR DIFFERENTIAL UNIT,TOYOTA LXS12	90250-06058	TOYOTA	20.000	EA
271	BELT,SAFETY:3 POINTS,REAR SEAT,LH,LX12	73480-43020-B0	TOYOTA	5.000	EA
272	GROMMET BUSH,STEERING:	45516-43030	TOYOTA	16.000	EA
273	SHAFT,INPUT:	33301-30070	TOYOTA	6.000	EA
274	GEAR:	33336-30020	TOYOTA	7.000	EA
275	GEAR,COUNTER:	33421-30141	TOYOTA	4.000	EA
276	GEAR:	33428-30050	TOYOTA	2.000	EA
277	BOOT,GEAR LEVER:	58808-43010-B0	TOYOTA	5.000	EA
278	YOKE SUB-ASSY:	45209-32020	TOYOTA	17.000	EA
279	TRANSMISSION ASSEMBLY:	33030-43090	TOYOTA	2.000	EA
280	BEARING,FLYWHEEL:12MM BORE,TOYOTA LXS12	6201.2RSR	FAG	219.000	EA
281	PIPE,EXHAUST:CENTRE,FOR TOYOTA LXS12	17420-54180	TOYOTA	3.000	EA
282	MOUNTING,EXHAUST PIPE:FOR TOYOTA LXS12	17505-64011	TOYOTA	7.000	EA
283	SUPPORT,FRONT HOOD:RH & LH,LXS10 & LXS12	53450-49015	TOYOTA	183.000	EA
284	AMPLIFIER BOX,THERMO	UTS-010TS-A	UTS AUTO	8.000	EA
285	CAMSHAFT:FOR TOYOTA LXS12	13501-54070	TOYOTA	11.000	EA
286	DRIER,RECEIVER:3/8 BSP C/W O-RING,LXS 12	BB2401	YUKI	110.000	EA
287	MOTOR ASSY F/R WINDOW REGULATOR	85710-30310	TOYOTA	2.000	EA
288	SPRING,RETURN:CLUTCH PEDAL	90949-03037	TOYOTA	12.000	EA
289	AMPLIFIER BOX,THERMO:FOR TOYOTA LX12	UTS-010TS-A	UTS AUTO	181.000	EA
290	RELAY:AIRCON,4 PINS,NAIS:FOR TOYOTA LX12	RE-JP-UTS-001RE	UTS AUTO	29.000	EA
291	VALVE,EXPANSION:C/W 3/8" O-RING & EQUALI	VA38OR01AF2	FUJIKOKI	102.000	SET
292	PIPE,LIQUID:C/W O-RING	SB00385	WUI HONG	43.000	EA
293	COIL,COOLING:C/W OUTLET AND INLET PIPE	CLTOCR-090	MEGA	62.000	EA
294	DUCTING,METAL:EVAPORATOR,TOYOTA LXS12	UTS-001UD	UTS AUTO	5.000	EA
295	CONDENSOR:3/8",O-RING DOUBLE FLOW	YU1424C022	YUKI	26.000	EA
296	SENSOR,THERMO AMPLIFIER:FOR TOYOTA LXS12	UTS-010TS-B	UTS AUTO	78.000	EA
297	FENDER PANEL:FRONT,RH,TOYOTA LXS12R	53811-43020(S)	TOYOTA	3.000	EA

298	FENDER PANEL:FRONT,LH,TOYOTA LXS12R	53812-43021	TOYOTA	1.000	EA
299	CLEANER:ENGINE FLUSH	210	OWS	127.000	CA
300	LUBRICANT:BRAKE QUIT SQUEAL:	550	OWS	117.000	CA
301	GASKET,FUEL INJECTOR:FOR TOYOTA LX12	11177-54020	TOYOTA	52.000	EA
302	VALVE,EXPANSION:5/16" O-RING W EQUALIZER	GBE-E15 FFKT2	FUJIKOKI	6.000	EA
303	SHOCK ABSORBER:FRT,LH & RH,TOYOTA LX12	48511-43011	TOYOTA	8.000	EA
304	LOCK ASSY,DOOR:FRONT,LH,FOR TOYOTA LXS12	69040-43030	TOYOTA	3.000	EA
305	LOCK ASSY,DOOR:REAR,RH,FOR TOYOTA LXS12	69050-43030	TOYOTA	6.000	EA
306	LOCK ASSY,DOOR:REAR,LH,FOR TOYOTA LXS12	69060-43040	TOYOTA	1.000	EA
307	PIPE,CONDENSER:FOR TOYOTA LXS12R TAXI	UTS-003LH	UTS AUTO	11.000	EA
308	PIPE,LIQUID:A,FOR TOYOTA LXS 12R TAXI	UTS-021LH	UTS AUTO	25.000	EA
309	CLIP:FOR CLUTCH BEARING,LXS12	31232-14010	TOYOTA	34.000	EA
310	BATTERY:MAINT FREE,NX120-12V,TOYOTA LX12	95D31LBHO	AMARON	27.000	EA
311	SHOCK ABSORBER ASSY:FRONT,RH,LXS12	48510-49038	TOYOTA	3.000	EA
312	SHOCK ABSORBER ASSY:FRONT,LH,LXS12	48520-49038	TOYOTA	1.000	EA
313	BUSH,FRONT STABILIZER:FOR TOYOTA LXS12	48815-43011	TOYOTA	31.000	EA
314	CUSHION,FRONT STRUT BAR:TOYOTA LXS12	48674-43010	TOYOTA	68.000	EA
315	RETAINER,RUBBER CUSHION:FOR TOYOTA LXS12	90948-02030	TOYOTA	7.000	EA
316	COLLAR,FRONT STRUT BAR:FOR TOYOTA LXS12	90387-18129	TOYOTA	6.000	EA
317	ARM,LOWER:FRONT,RH,FOR TOYOTA LXS12	48068-49036	TOYOTA	1.000	EA
318	ARM,LOWER:FRONT,LH,FOR TOYOTA LXS12	48069-49036	TOYOTA	5.000	EA
319	NUT,FRONT STRUT BAR:FOR TOYOTA LXS12	90170-18001	TOYOTA	30.000	EA
320	WASHER,RETAINER:FOR TOYOTA LXS12	90206-18001	TOYOTA	28.000	EA
321	NUT,LOCK:FOR TOYOTA LXS12	94182-10800	TOYOTA	47.000	EA
322	BELT,SAFETY:R/RH & LH,TOYOTA CROWN LX12R	73360-43050-C0	TOYOTA	1.000	EA
323	BELT,SAFETY:3 POINTS,REAR SEAT,RH,LX12R	73470-43030-B0	TOYOTA	2.000	EA
324	SHAFT,AXLE:REAR,FOR LXS12 & LXS12R	42311-43010	TOYOTA	8.000	EA
325	PULLEY,CRANKSHAFT:NO.2,FOR TOYOTA LXS12R	88451-35030	TOYOTA	33.000	EA
326	SEAL,VALVE STEM OIL:FOR TOYOTA LXS 12R	90913-02117	TOYOTA	48.000	EA
327	SPIDER KIT:UNIVERSAL JT,LXS12 & LXS12R	04371-60100	TOYOTA	92.000	EA
328	VALVE,EXPANSION:3/8" O-RING INPUT PORT	A38OR02AF2	FUJIKOKI	11.000	EA
329	FAN MOTOR ASSY:FOR TOYOTA LX12 TAXI	FA12V12	SANDEN	1.000	EA
330	REGULATOR,WINDOW:F/R,TOYOTA LXS12	69801-43010	TOYOTA	5.000	EA
331	REGULATOR,WINDOW:F/L,TOYOTA LXS12	69802-43010	TOYOTA	2.000	EA
332	REGULATOR,WINDOW:R/R,TOYOTA LXS12	69830-43010	TOYOTA	1.000	EA
333	REGULATOR,WINDOW:R/L,TOYOTA LXS12	69840-43010	TOYOTA	3.000	EA
334	SEAL,OIL:CRANKSHAFT FRONT:TOYOTA LXS 12	90311-42031	TOYOTA	12.000	EA
335	SEAL,OIL:CRANKSHAFT REAR:TOYOTA LXS 12	90311-85008	TOYOTA	1.000	EA
336	BEARING:VACUUM PUMP,FOR TOYOTA LXS 12	90099-10199	TOYOTA	4.000	EA
337	PULLEY,IDLER:AIR CON,TOYOTA CROWN LXS 12	#N/A	#N/A	224.000	EA
338	CRANKSHAFT:FOR 5L ENGINE,CROWN LXS12	13401-54100	TOYOTA	10.000	EA
339	CYLINDER ASSY:CLUTCH RELEASE,LXS12	31470-22112	TOYOTA	20.000	EA
340	MIRROR ASSY:OUTER REAR VIEW,LH,LXS12R	87940-43080-CO	TOYOTA	2.000	EA
341	SWITCH ASSY, HEADLAMP DIMMER(TOY LXS12R)	84140-30230	TOYOTA	11.000	EA
342	CYLINDER,BRAKE:REAR,FOR TOYOTA LXS12R	47550-43090	TOYOTA	7.000	EA
343	GUIDE:FOR SAFETY BELT,TOYOTA CROWN LXS	73343-40010-B2	TOYOTA	10.000	EA
344	FUSE TERMINAL:MALE,100A,FOR TOYOTA LXS12	90982-08246	TOYOTA	127.000	EA
345	FUSE TERMINAL:MALE,50A,FOR TOYOTA LXS12	90982-08282	TOYOTA	33.000	EA
346	BAR ASSY:STRUT RH FRONT,TOYOTA LXS 12R	48660-43010	TOYOTA	3.000	EA
347	BAR ASSY:STRUT LH FRONT,TOYOTA LXS 12R	48670-43010	TOYOTA	4.000	EA

348	ROD ASSY:PANHARD REAR,TOYOTA LXS 12R	48740-43010	TOYOTA	3.000	EA
349	CROSS-MEMBER SUB-ASSY:FRONT,LXS 12R	51201-43030	TOYOTA	2.000	EA
350	COVER:ENGINE UNDER FRONT,TOYOTA LXS 12R	51441-43010	TOYOTA	6.000	EA
351	GRILLE,RADIATOR:RH FRONT,TOYOTA LXS 12R	53112-43010	TOYOTA	4.000	EA
352	GRILLE,RADIATOR:LH FRONT,TOYOTA LXS 12R	53113-43010	TOYOTA	5.000	EA
353	SUPPORT:SIDE BUMPER REAR,TOYOTA LXS 12R	52155-43010	TOYOTA	40.000	EA
354	EMBLEM,RADIATOR GRILLE:TOYOTA LXS 12R	75311-30260	TOYOTA	8.000	EA
355	LOCK ASSY,HOOD:TOYOTA LXS 12R	53510-43010	TOYOTA	11.000	EA
356	MEMBER SUB-ASSY:RADIATOR FRONT,LXS 12R	57104-43031	TOYOTA	3.000	EA
357	APRON SUB-ASSY:FRONT RH,TOYOTA LXS 12R	53701-43021	TOYOTA	1.000	EA
358	APRON SUB-ASSY:FRONT LH,TOYOTA LXS 12R	53702-43021	TOYOTA	1.000	EA
359	MEMBER CHASSIS:FRONT RH,TOYOTA LXS 12R	57101-43917	TOYOTA	1.000	EA
360	MEMBER CHASSIS:FRONT LH,TOYOTA LXS 12R	57102-43906	TOYOTA	2.000	EA
361	MEMBER CHASSIS:REAR LH,TOYOTA LXS 12R	57602-43012	TOYOTA	2.000	EA
362	MEMBER SUB-ASSY:MOUNTING REAR,LXS 12R	57209-43020	TOYOTA	5.000	EA
363	PANEL SUB-ASSY:COWL,TOYOTA LXS 12R	55700-43038	TOYOTA	1.000	EA
364	LOUVER SUB-ASSY:COWL TOP VENT,LXS 12R	55708-43010	TOYOTA	2.000	EA
365	PANEL EXT:REAR SIDE LH,TOYOTA LXS 12R	58306-43011	TOYOTA	5.000	EA
366	PULLEY:FOR VANE PUMP,TOYOTA LXS12R	44319-22010	TOYOTA	17.000	EA
367	SEAL,OIL:FOR CAMSHAFT,TOYOTA LXS12R	90311-32019	TOYOTA	5.000	EA
368	GUAGE,FUEL TANK:FOR TOYOTA LXS12R	83320-80333	TOYOTA	6.000	EA
369	CASING:FOR EVAPORATOR,TOYOTA LXS12R TAXI	ACCASTSD01AS3	SANDEN	15.000	EA
370	GAUGE SUB ASSY:FOR TOYOTA LXS12R TAXI	83243-3A530	TOYOTA	4.000	EA
371	SPRING:FOR REAR BRAKE ADJUSTER,LXS12R	90506-12480	TOYOTA	30.000	EA
372	LEVER:RH,FOR REAR BRAKE ADJUSTER,LXS12R	47643-43010	TOYOTA	25.000	EA
373	LEVER:LH,FOR REAR BRAKE ADJUSTER,LXS12R	47644-43010	TOYOTA	9.000	EA
374	COIL,EVAPORATOR:FOR TOYOTA LXS12R	UTS-012-CO	UTS AUTO	11.000	EA
375	VALVE,BROAD:FOR TOYOTA LXS12R	447500-9050	DENSO	12.000	EA
376	PIPE:FOR EVAPORATOR,TOYOTA LXS12R	UTS-014-PI	UTS AUTO	28.000	EA
377	BUSH,CLUTCH SPRING RETAINER:FOR LXS12R	90386-05017	TOYOTA	37.000	EA
378	COOLER, OIL FOR TOYOTA LXS 12	15710-54050	TOYOTA	1.000	EA
379	SEAT, FRONT COIL SPRING (UPPER LH & RH)	48044-22070	TOYOTA	5.000	EA
380	WEATHERSTRIP:FRONT DOOR,RH,TOYOTA LXS12	67861-43012	TOYOTA	1.000	EA
381	WEATHERSTRIP:FRONT DOOR,LH,TOYOTA LXS12	67862-43012	TOYOTA	1.000	EA
382	LAMP ASSY,THIRD BRAKE:FOR TOYOTA LX12	81570-43040 BO	TOYOTA	4.000	EA
383	PIN,BRAKE SHOE:FOR TOYOTA CROWN LXS12	47447-30020	TOYOTA	26.000	EA
384	BELT,SEAT:F/R,FOR TOYOTA CROWN LXS12	73210-43060-BO	TOYOTA	1.000	EA
385	BELT,SEAT:F/L,FOR TOYOTA CROWN LXS12	73220-43060-BO	TOYOTA	1.000	EA
386	BUSH:NO.1,FOR GEAR LEVER,TOYOTA LXS12	33548-22020	TOYOTA	5.000	EA
387	PIPE:3/8" X 110MM LG C/W ADAPTOR,LXS12/R	YK-A4347	MEGAPOWER	10.000	EA
388	FLANGE:FOR PROPSHAFT ASSY,LXS12	37304-35041	TOYOTA	15.000	EA
389	SILENCER,AIR DUCT:FOR TOYOTA LX12R TAXI	17805-54340	TOYOTA	3.000	EA
390	SUPPORT:REAR BUMPER SIDE,TOYOTA LXS 12	90189-05133	TOYOTA	90.000	EA
391	SPEEDOMETER ASSY:WITH TACHOMETER,TOYOTA	83220-43080	TOYOTA	3.000	EA
392	CASE SUB ASSY,TIMING GEAR,TOYOTA LXS12	11311-54052	TOYOTA	7.000	EA
393	BRACKET,SUB ASSY:OIL FILTER,TOYOTA LXS12	15609-54082	TOYOTA	8.000	EA
394	HOUSING,WATER OUTLET:FOR TOYOTA LXS12	16333-54113	TOYOTA	69.000	EA
395	NOZZLE,FUEL INJECTOR:TOYOTA CROWN LXS12	093400-6810	DENSO	100.000	EA